

VONETS Hotspot Setup Guide



DISCONNECT YOUR LAPTOP OR DESKTOP FROM WIFI OR
ETHERNET CONNECTION.


CONNECT THE ETHERNET AND USB CABLES TO YOUR LAPTOP OR DEVICE AS SEEN BELOW.



WAIT UNTIL THE VONETS ADAPTER IS FULLY POWERED ON WHICH IS INDICATED BY A SOLID BLUE AND SLOW FLASHING GREEN LIGHT AS SEEN BELOW.




OPEN YOUR BROWSER AND ENTER IP ADDRESS
192.168.254.254 AND PRESS ENTER.

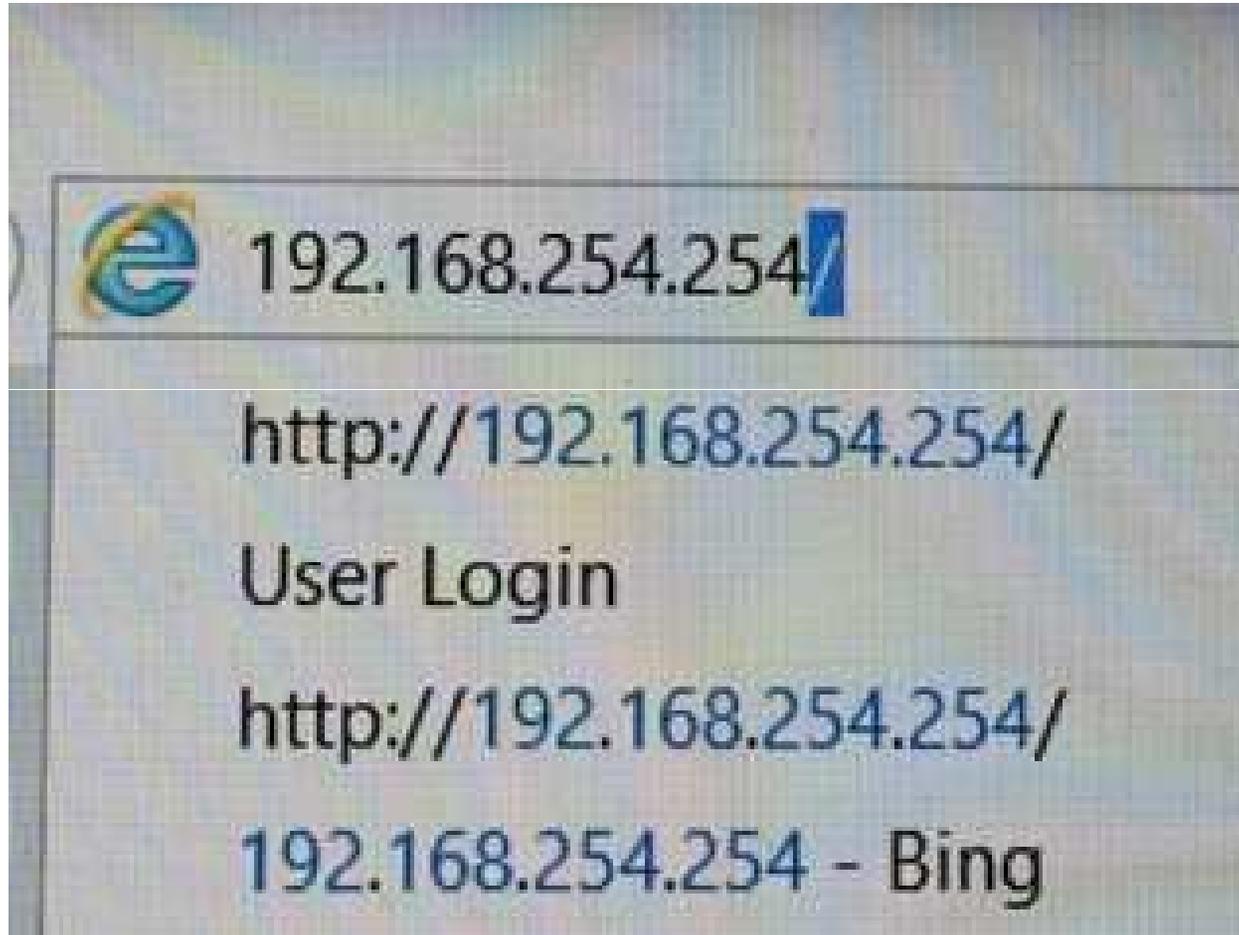


THE WEB INTERFACE OF THE VONETS ADAPTER WILL OPEN IN YOUR BROWSER.



ENTER THE WORD **ADMIN** FOR YOUR USER NAME AND PASSWORD AS SEEN BELOW AND CLICK LOGIN.

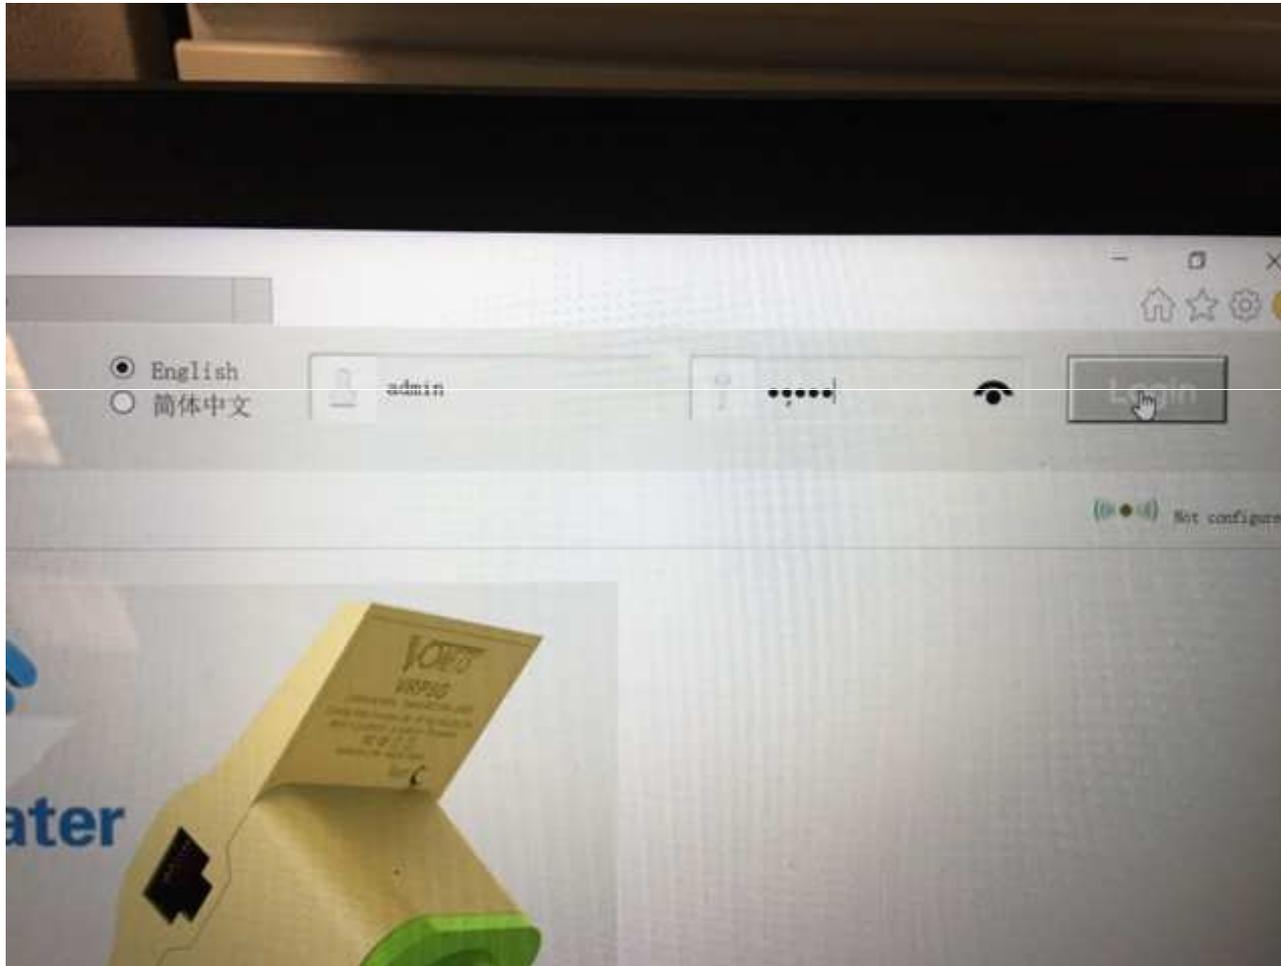


AFTER LOGGED IN, A LIST OF WIFI NETWORKS IN YOUR AREA WITH BE POPULATED AS SEEN BELOW.

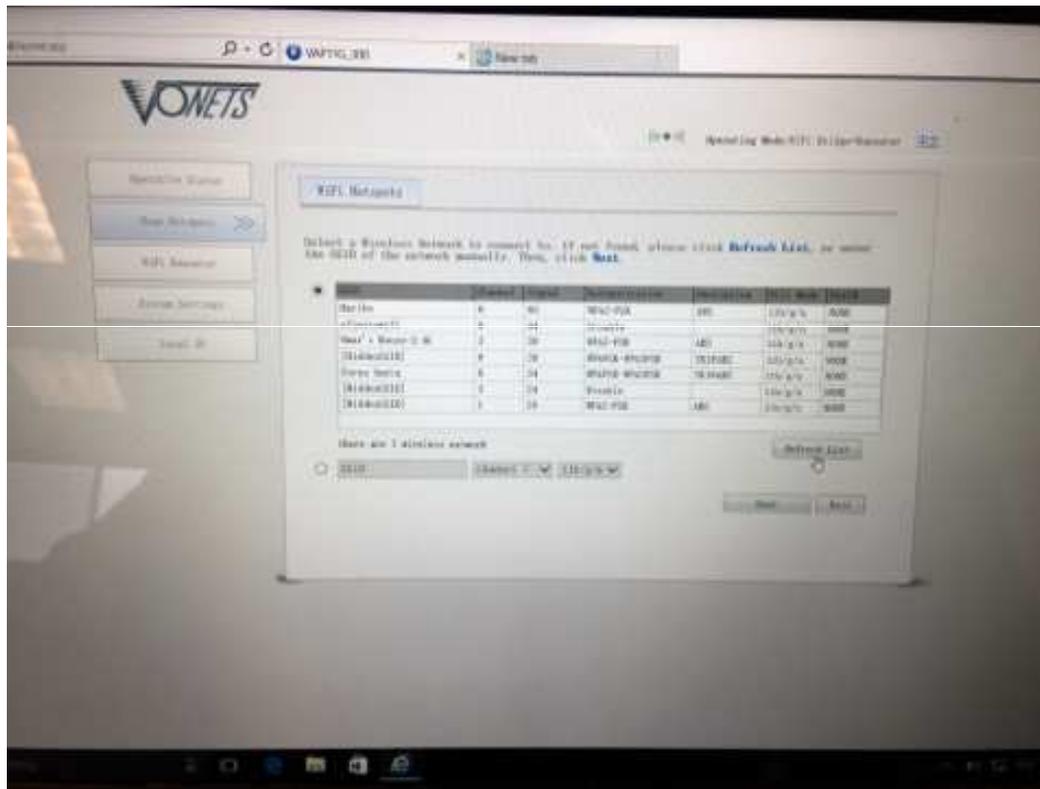


Note: If your network is not in the populated list, click the refresh button to search for your network. If your network still doesn't show up please contact your local Network administrator.



SELECT YOUR NETWORK AND CLICK NEXT.

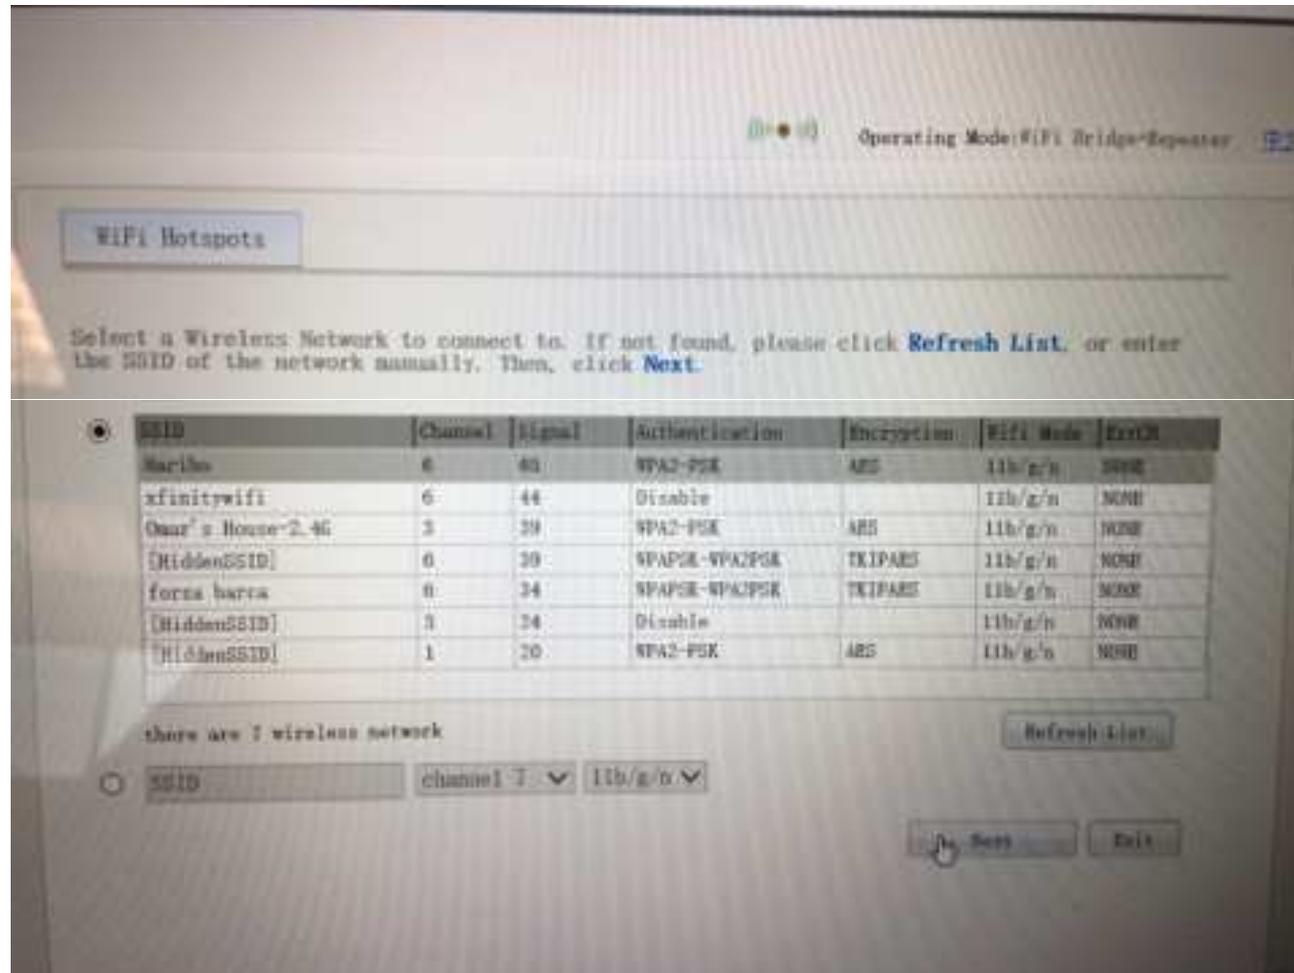

IN THE “SOURCE WIRELESS HOTSPOT PASSWORD” SECTION, ENTER THE NETWORK KEY/PASSWORD IN THE FIELD AS SEEN BELOW AND THEN CLICK APPLY.

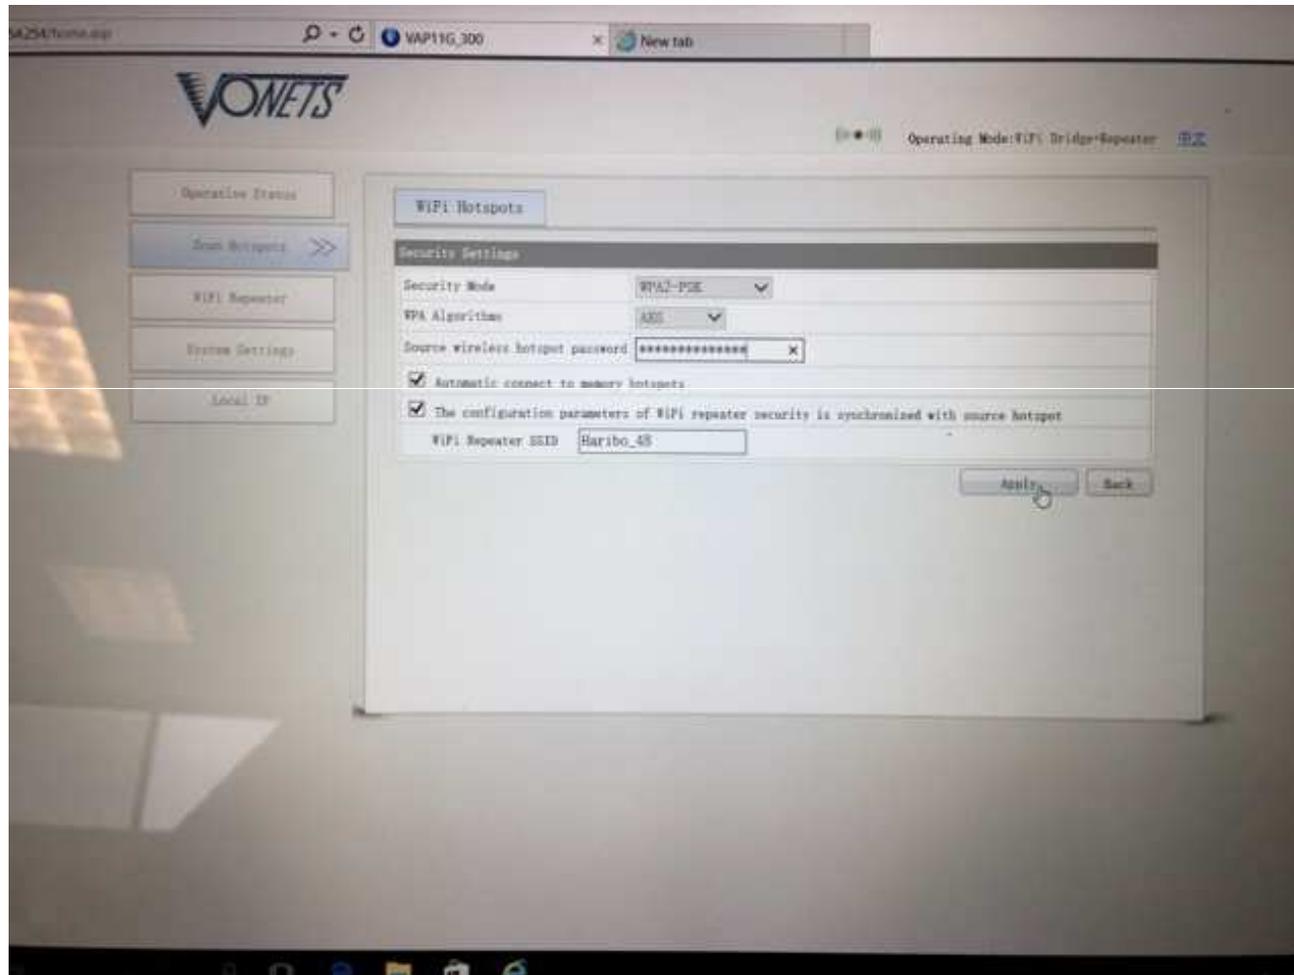

NOW CLICK REBOOT. A “PLEASE WAIT” ICON WILL SHOW UP ON YOUR SCREEN.

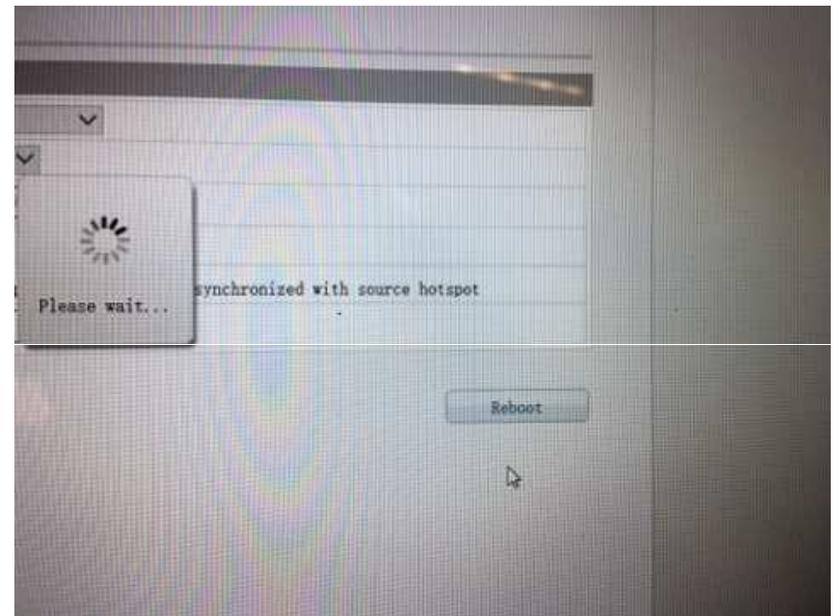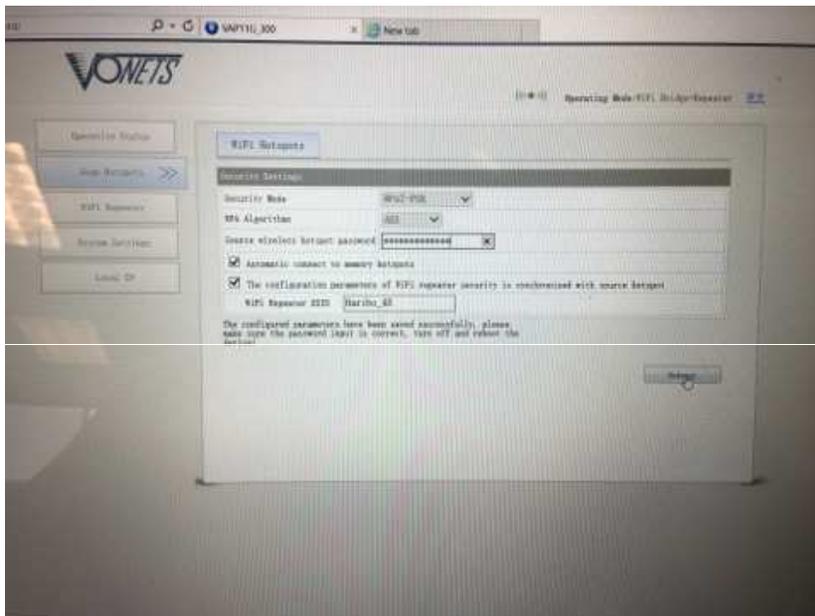

THE VONETS DEVICE WILL NOW REBOOT. WAIT FOR THE ADAPTER TO POWER BACK ON. ONCE BOTH BLUE AND GREEN LIGHTS ARE FLASHING TRY TO BROWSE TO A WEBPAGE. YOUR ADAPTER IS NOW CONFIGURED AND WILL PROVIDE INTERNET ACCESS TO ANY DEVICE IT IS CONNECTED TO.

To reset the device to connect to a different network, press and hold the black small button next to the cable on the device for 30 secs.



THE DEVICE WILL RESET AN ALLOW YOU TO START THE SETUP PROCESS AGAIN.

INDICATOR LIGHT INSTRUCTIONS

Wifi Status Light (Blue Light)	Hop Spot Connection Status	Note
Continuous Quick Flash	Not Connected	Products are not Configured for any hot spots
Continuous Quick Flash	Connected	WIFI hot spot signal > 50%
Intermittent Slow Flash	Connected	WIFI hot spot signal is 10%-50%
Continuous Slow Flash	Connected	Being connected to a hot spot
Continuous Slow Flash	Connection Failed	Password is wrong or not connected to a hot spot

Wifi Status Light (Green Light)	Hop Spot Connection Status	Note
Continuous Quick Flash	Not Connected	Products are not Configured for any hot spots
Continuous Quick Flash	Connected	Connected to 5Ghz WIFI Hot spot
Intermittent Slow Flash	Connected	Connected to 2.4Ghz WIFI Hot spot
Continuous Slow Flash	Connected	Connecting the source Hot Spot
Continuous Slow Flash	Connection Failed	Password is wrong or not connected to a hot spot

Thank You!